 





Helium / Hi-Float™ Adapter Instruction Sheet

Hi-Float™ Adapter - Set Up

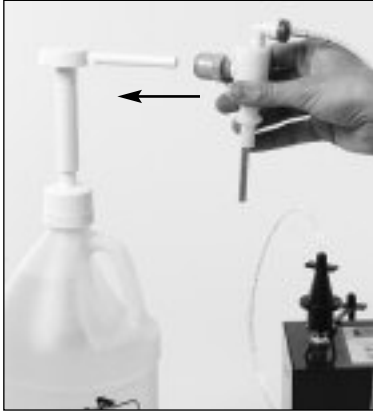

 
1 Firmly press-fit connect the Helium/Hi-Float Adapter on to the outlet of the Hi-Float pump. The Adapter has a locking ring that will hold it in place.

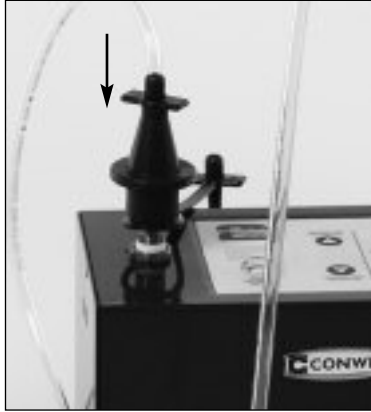

2 Attach the helium line to the filling outlet of a Duplicator 2 inflator or Dual Split-Second Sizer.



3 Set the Duplicator 2 or Dual Sizer to the appropriate size setting for 11-inch or larger balloons. Note, if using a Dual Sizer, be sure to set the inflator mode to operate from one outlet – not both.

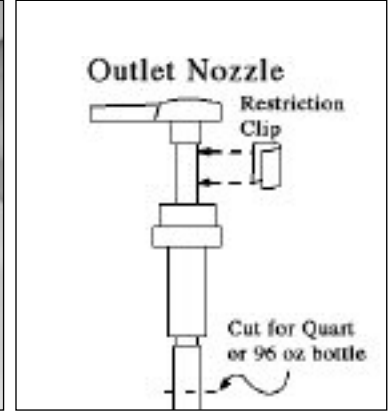

4 Place the Hi-Float clip on the stem of the Hi-Float pump. (Clips are included with the Hi-Float pump.) See www.Hi-Float.com for Hi-Float recommendations.

Hi-Float™ Adapter - Inflating Instructions



1 Hold the balloon under the Helium/Hi-Float Adapter with the silver outlet in the center of the balloon.



2 Press the pump to inject the Hi-Float into the body of the balloon. Rub the balloon to evenly coat the inside of the balloon with Hi-Float – be sure not to get Hi-Float into the neck of the balloon.



3 Tap the foot pedal of the Duplicator 2 or Dual Sizer to automatically inflate the balloon to the perfect size.



4 Pinch the neck of the balloon and remove it from the filling outlet. Wipe off any excess Hi-Float from the outlet.

Removing the Helium/Hi-Float™ Adapter



To release the Helium/Hi-Float Adapter from the Hi-Float pump press the locking ring down with your finger nails. This will release the Adapter and it will easily slide off the pump. Be sure to depress the locking ring fully before pulling the Adapter off the pump.

Maintenance Tips

- Always cover the tip of the Helium/Hi-Float Adapter with the red plastic Hi-Float pump cap when the unit is not in use. This prevents Hi-Float from clogging the Adapter. (Note, if you misplace the pump cap, a 5-inch or smaller balloon stretched over the tip works well.)
- If Hi-Float clogs the Helium/Hi-Float Adapter remove the Adapter from the pump and flush it with warm water. Warm water dissolves dried Hi-Float.



Hi-Float™ Power Pump Instruction Sheet

Hi-Float™ Power Pump - Set Up




1 Connect the Power Pump regulator to a nitrogen or helium cylinder.



2 Place a large bottle of Ultra Hi-Float on the holder and secure in place with the Velcro belt.



3 Hook the wire loop under the pump handle. Place the 11-inch Hi-Float clip on the Hi-Float pump (included with the Hi-Float pump).

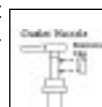

Follow the instructions on the reverse page to set-up the Helium/Hi-Float Adapter.

Hi-Float™ Power Pump - Operating Instructions



1 Hold the balloon under the Helium/Hi-Float Adapter with the silver outlet in the center of the balloon.



2 Press the button on the control box to activate the Power Pump. Hold down button until the pump depresses fully. (Consult Balloon Size Chart at right) Rub the balloon to evenly coat the inside with Hi-Float. Be sure not to get Hi-Float into the neck of the balloon.



If pre-treating balloons to be filled with helium at a later time, skip step 3.

3 Tap the foot pedal of the Duplicator 2 or Dual Sizer to automatically inflate the balloon to the perfect size. Pinch the neck of the balloon and remove it from the filling outlet. Wipe off any excess Hi-Float from the outlet.

Tips



T-4-2 Adapter

- If the balloons are going to be treated and immediately inflated use the T-4-2 Adapter on a helium cylinder. Use a wrench to tighten the T-4-2 Adapter to the helium cylinder. The T-4-2 Adapter will enable two regulators to work off one helium cylinder. Hand-tighten the Power Pump regulator and the Duplicator 2 or Dual Sizer regulator to the T-4-2 Adapter.
- If you're pre-treating balloons with Hi-Float to be inflated at a later time, nitrogen is a more economical gas to use.
- Follow Hi-Float's charts and recommendations to use the appropriate amount of Hi-Float in the balloon.
- Visit www.Hi-Float.com to learn more about working with Hi-Float.

Balloon Size Chart

- 11-inch Balloons**
press button 1 time.
- 14-inch Balloons**
Press button 2 times.
- 16-inch Balloons**
Press button 3 times.

Service & Warranty

For assistance with service & repair issues, or for warranty information, please visit ConwinOnline.com, or call (818)246.9233



Online
Projects
Designs
Galleries
...and more!

ConwinOnline.com

Conwin's Masterpiece Series Videos

These exciting instructional videos feature the industry's top balloon artists sharing their secrets of the trade on everything from the latest decorating techniques to business management and marketing skills. Visit ConwinOnline.com to see our complete line of educational videos.



10292004



CONWIN INC.
4510 Sperry Street • Los Angeles, CA 90039
Phone (818) 246-9233 FAX (818) 246-6862

Visit www.ConwinOnline.com today!