

 


# Double Bubble Outlet Instruction Sheet


### Note:

If you're using an older model Dual Split-Second Sizer, you will need the latest model replacement tips to use the Double Bubble Outlet.  
**Conwin Item #35022 (2 pack)**

## Inflation Instructions

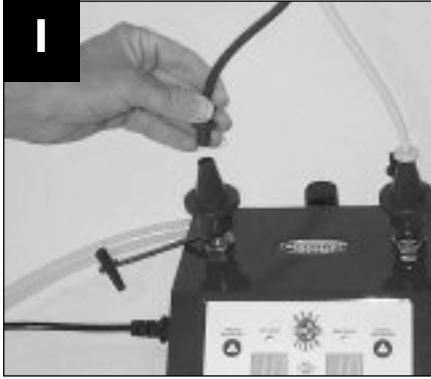

 1. Press-fit the Double Bubble Outlet onto the inflating outlets of the Dual Split-Second Sizer. Attach the yellow hose to the right outlet and the blue hose to the left outlet.

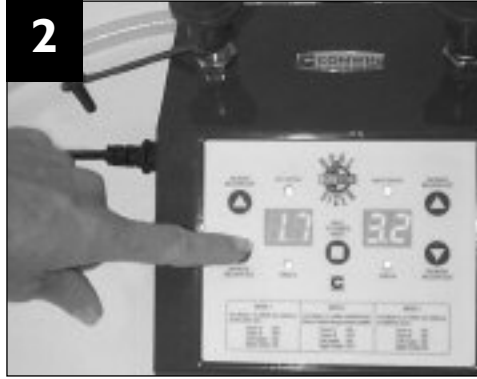

2. Set the Dual Split-Second Sizer to MODE 3 on the control panel. Reference the following chart to set the unit to properly inflate the balloons.

Double Bubble Balloon Size Chart	
<b>Outside Balloon: 16"</b>	Right outlet, yellow hose, Dual Sizer Setting: 3.2 Seconds
<b>Inside Balloon: 11"</b>	Left outlet, blue hose, Dual Sizer Setting: 1.7 Seconds



3. Place the 11" balloon over the blue hose.



4. Place the 16" balloon over the 11" balloon and the yellow hose. Hold firmly to prevent helium from escaping during the inflation process.



5. Tap the foot pedal to inflate the balloons. After the balloons are fully inflated, pinch the neck of the balloons together and remove the Double Bubble outlet quickly to prevent helium from escaping.

## Tying the Balloons



1. Pull the neck of the inside 11" balloon while pinching the necks of the 2 balloons together.



2. Stretch the neck of the inside 11" balloon around the neck of the outside 16" balloon.



3. Tie off the balloon.