



Balloon Bulb Set Instruction Sheet

Balloon Bulb Includes:


- 1 Unit w/ Powercord
- 1 Fluorescent Bulb

General Precautions

- To prevent the risk of electrical shock, do not use the Balloon Bulb Set outdoors when weather conditions are wet. Never install Balloon Bulbs on a wet floor or work area.
- If the Balloon Bulb malfunctions or is damaged in any way discontinue use and unplug unit from electrical outlet. Contact an authorized Conwin Service Center for details on how to receive service.

WARNING: DO NOT USE INCANDESCENT (standard) LIGHT BULBS

Attach the Balloon to The Balloon Bulb

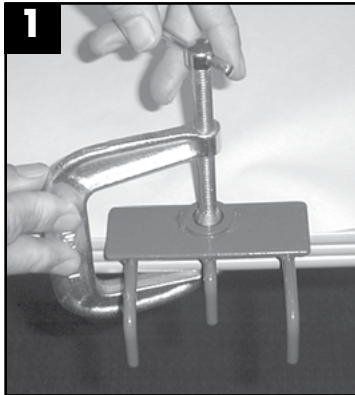


1 Clamp the Balloon Stretching Tool to a table or other stable surface. The clamp should be on the left side of the tool.



2 Roll the neck of a large balloon down to the body of the balloon.



3 Stretch the balloon onto the tool, and insert the balloon bulb unit.

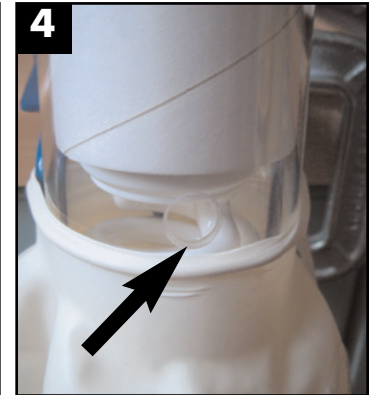

4 Insert the Balloon Bulb into the stretched balloon until you reach the inflation hole.

Inflate the Large Balloon



Important: ONLY USE A LOW-PRESSURE AIR BLOWER. Do not use a helium inflator, Dual Sizer, or Duplicator 2 to inflate the large balloon.

To properly inflate the large balloon, place the base of the Balloon Bulb over the outlet of a Conwin Air-Pro or Air Force 4 Inflator. When the large balloon is inflated to desired size quickly remove the Balloon Bulb from the inflator and roll the neck of the balloon over the inflation hole to seal the balloon. Roll up the neck of the balloon to add or release air to adjust the size of the balloon.

LED Spectrum Balloon Bulb™

1. Unscrew base and install 3 AAA Batteries & Re-attach base. Do not grip by clear tubing.
2. Remove clear battery activation tab on remote by pulling out and discarding.
3. Use remote to turn unit on and off and to select color and function.
4. Replace batteries after every 10 hours of use.



Rig and Light the Balloon



Mount on Conduit

Place the Balloon Bulb on top of a conduit and tighten the thumb screw to lock into place.

Hanging Balloon Bulbs

The Balloon Bulb can also be suspended from the ceiling by threading dacron archline through the hole in the base of the unit and tying it securely to the ceiling. (See right)

Use extension cords to rig Balloon Bulbs longer distances. To light the Balloon Bulb, plug the power cord into a wall socket or power strip.



CONWIN INC.
4510 Sperry Street • Los Angeles, CA 90039
Phone (818) 246-9233 FAX (818) 246-6862

Service & Warranty

For assistance with service & repair issues or for warranty information, please visit ConwinOnline.com/Support, or call (818) 246-9233.