



Ribbon Dispenser Instruction Sheet



8-Spool Ribbon Dispenser


Versatile unit mounts on wall or cylinder. Special bracket is included to hang from any size cylinder.



20-Spool Ribbon Dispenser

Compact free-standing unit features two ribbon cutters. Ideal for in the store or on-the-job decorating.

Design Features

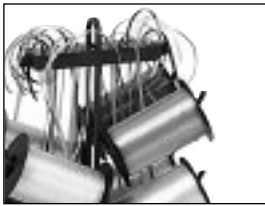

Top Feed Ribbon Organizer

Ribbons feed up from the center of the dispenser to the top organizer with individual guide holes. This insures that the ribbons do not tangle and allows the user to quickly select the desired color. The Top-Feed Organizer also allows for all ribbons to be pulled simultaneously for pre-cutting.



Convenient Ribbon Cutter

Both of Conwin's ribbon dispensers feature convenient ribbon cutters. The cutters are designed with a concealed blade for user protection. When blade becomes dull, the entire unit unscrews for easy replacement.

Conwin #35800 (Replacement 4-pack)



Loading Ribbon Dispensers



1. Place spools on dispenser with all ribbons feeding up the center of the rack. Feed each ribbon through the top plate. There is a guide hole for each spool of ribbon.




2. Rubber bands prevent the spools from free-spinning and hold the ribbons in place when transporting the dispenser. Stretch the rubber bands over the spool arms using one rubber band for every two spools.

Tips For Best Results

1. Use your ribbon dispenser as a balloon holder. The weight of the dispenser will hold inflated balloons until needed—just tie balloons to ribbons and wait to cut the ribbons until desired.
2. Replace the ribbon cutters regularly. A sharp blade saves time and increases productivity. Replacement Ribbon Cutters (Conwin #35800) are available in 4-packs from your authorized Conwin Distributor.
3. Pre-cut several ribbons at once. Mark a table or counter top with a desired ribbon length. Place the ribbon dispenser at the edge of the mark and pull all ribbons simultaneously. Cut ribbons with scissors.


8-Spool Ribbon Dispenser Mounting Instructions

Wall-Mounting Instructions

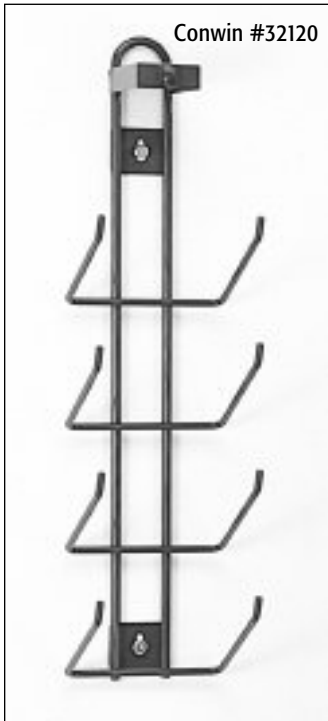


1. Hold the dispenser against the wall trace outline of mounting holes with a pencil. Drill a pilot hole in the wall. Select the appropriate drill bit size based on the size of the anchor insert or the size of the wood screw.
2. When mounting the dispenser on drywall, insert the Drywall Anchor insert into the pilot hole.
3. Place dispenser over pilot holes or anchors and screw into place. Important: Leave approximately 1/4" between the head of the screw and the wall. The key hole wall mounts enable the dispenser to be easily removed from the wall to place on a cylinder or to take on a job.
4. See reverse side for loading instructions and tips.

Cylinder-Mounting Instructions

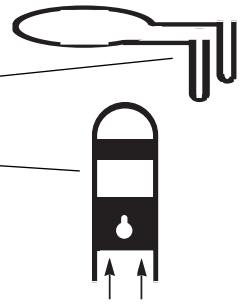

1. Secure the cylinder in a Conwin Cylinder Safety Stand before using this product.
2. Place the dispenser mounting bracket over the top of the cylinder.
3. Pinch the sides of the bracket together.
4. Slide the dispenser over the hooks just below the key hole located on the back of the dispenser.

Mounting Screws for Dispensers

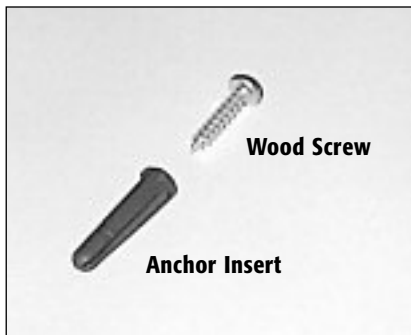

Mounting on a Wood Surface:

- Drill an 1/8" pilot hole.
- Mount with screw provided.

Mounting on a Drywall Surface or Counter Top:

- Drill a 1/4" pilot hole.
- Insert the anchor into the pilot hole.
- Mount with screw provided.

Conwin Products for Ribbons



Grip-It Balloon Holder



Grip-Tabs 100-Pack



Grip-Strips 10-Pack

Service & Warranty

For assistance with service & repair issues, or for warranty information, please visit ConwinOnline.com, or call (818)246.9233



Online
Projects
Designs
Galleries
...and more!

ConwinOnline.com

03312006

Conwin's *Portfolio Builders*

Update Your Portfolio!

A picture is worth a thousand words. Is your portfolio up to date on the latest? Conwin's Portfolio Builder images are the perfect solution for making winning presentations to your clients. Thirty-two photo quality images are available in the full series.



Visit www.ConwinOnline.com today!



CONWIN INC.
4510 Sperry Street • Los Angeles, CA 90039
Phone (818) 246-9233 FAX (818) 246-6862