




Precision Air Inflator Instruction Sheet

Precision Air Inflator Includes:


- | | |
|--------------------------|----------------------------|
| 1 Precision Air Inflator | 1 Calibration Tool |
| 1 Power Cord | 2 Detachable Outlets |
| 1 Foot Pedal | 2 Universal Extension Tips |
| 1 Carrying Case | |

Getting Started


- To prevent the risk of electrical shock, do not use the Precision Air Inflator outdoors when weather conditions are wet. Never operate unit on a wet floor or work area.
- Prior to plugging the Precision Air Inflator into an electrical outlet, verify that the electrical rating (listed on the label on the back of the Precision Air Inflator) is suitable for the outlet.
- If the Precision Air Inflator malfunctions or is damaged in any way discontinue use and unplug unit from electrical outlet. Contact an authorized Conwin Service Center for details on how to receive service.
- Never attempt to repair the Precision Air Inflator yourself. Opening the Precision Air Inflator case will automatically void manufacturer warranty. Contact an authorized Conwin Service Center for all repairs.

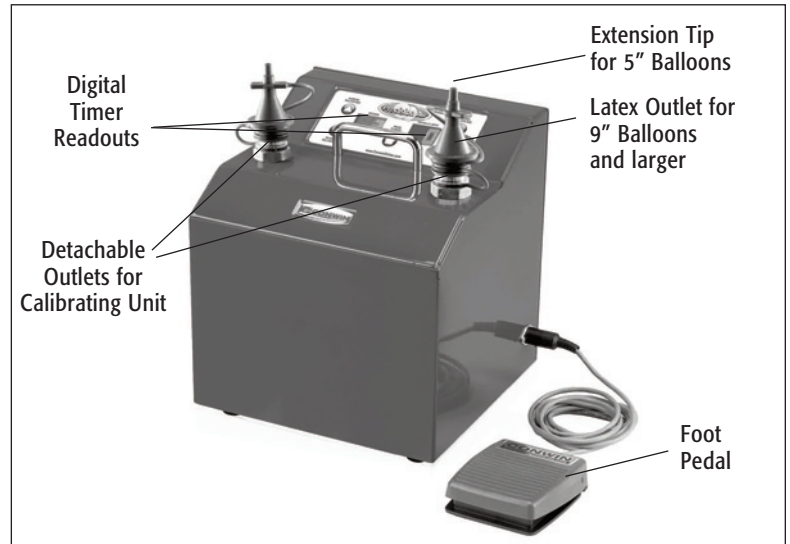

To attach the outlets, firmly press on to each filling port.

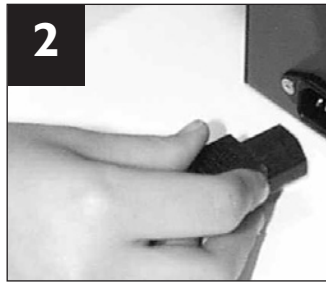

Plug the power cord into the side of the unit and into an electrical outlet. (A power strip with a surge protector is recommended.) The digital display will appear when unit has power.

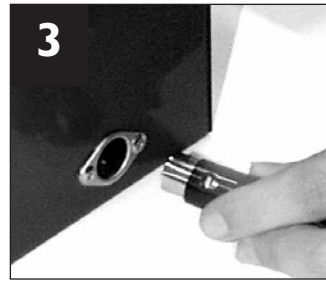

Plug the foot pedal into the side of the unit.

Accessory Items



Item # 37340

Designer Base Plates fit 1/2" electrical conduit and feature a carrying handle that holds 2 base plates and 2 risers.



Item # 37341


Light Weight Base Plates fit 1/2" electrical conduit and are great for indoor and light weight balloon decor.




Item # 36099

Heavy Weight Sandbag holds up to 25 lbs of sand or gravel and can fit over base plates or risers.

Setting the Precision Air Inflator

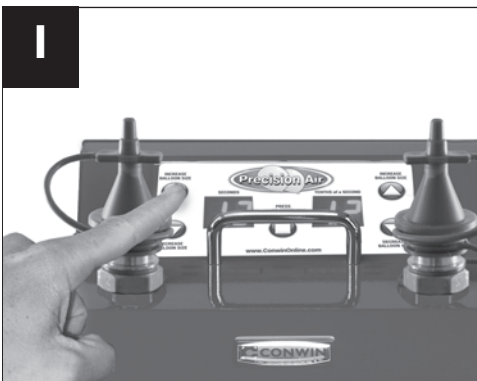

Reference the Time Setting Chart (Fig 1.0) to set the Precision Air for the proper balloon size. Set the appropriate number of Seconds by pressing the arrow buttons on the left side of the control panel digital display window. (Note: For 5" and smaller balloons, the second setting should be set at 00.)

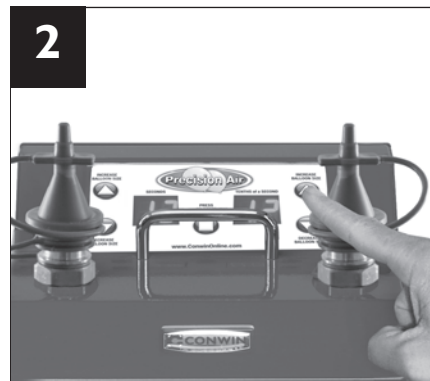

Set the appropriate number of Tenths of a Second by pressing the arrow buttons on the right side of the control panel digital display window.

Time Setting Chart (Fig 1.0)


BALLOON SIZE	APPROX. TIME SETTING
5" BALLOON	0.8 SECONDS
9" BALLOON	1.5 SECONDS
11" BALLOON	2.5 SECONDS
16" BALLOON	8 SECONDS

The following settings should be used as guidelines for the Precision Air. Please note that size settings will vary based on user preference, balloon color, manufacturer and from unit to unit. To adjust the size of balloon to your individual preference it is necessary to inflate test balloons.

Inflating Balloons with the Precision Air Inflater



1 Place the extension tip over the filling outlet when inflating 5" balloons, and 260s. Place the neck of the balloon all the way down on the extension tip until the neck is touching the base of the tip.

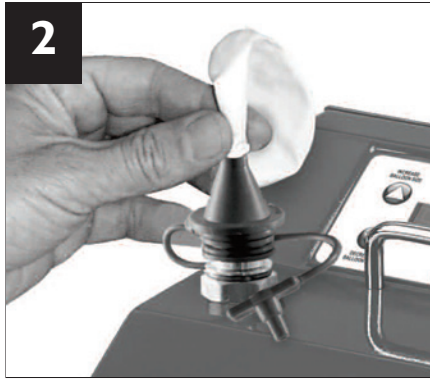

2 Remove the extension tip from the filling outlet when inflating 9" and larger balloons. Slightly roll the neck of the balloon over the inflating tip. This will insure the air enters the center of the balloon and the round shape of the balloon is maintained during the inflation process.




3 When inflating 260 balloons hold the balloon over the filling outlet and pull the end of the balloon upward to allow the air to enter into the balloon more easily.



4 Tap the foot pedal to begin the inflation cycle. When the system automatically shuts-off, remove the balloons from the outlets without allowing any of the air to escape, and tie.

Important Note: Sizing will vary on 260 balloons due to the amount of tension applied by user while stretching the balloon during the inflation cycle. Also, pearlized and specialty color 260 balloons will inflate differently than standard color balloons due to the thickness and resistance of the latex.

Using and Resetting the Counter

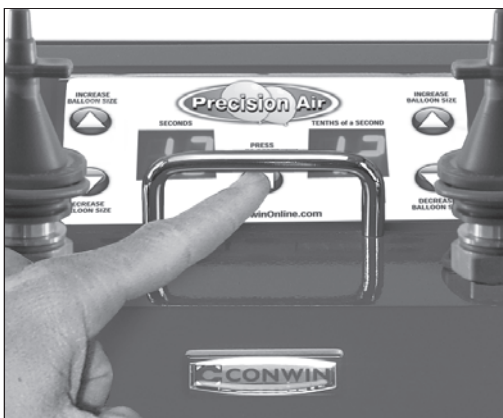

• Every time the foot pedal is pressed the cycle count will be displayed on the digital display windows.

• The time setting for the inflation cycle will disappear once the foot pedal has been pressed. To verify or change the time setting for the inflation cycle, press any of the arrow buttons on the control panel once.

• The balloon time setting will be displayed on the digital window. Press the Reset button in the center of the control panel to set the counter back to zero.

Precautions:

1. The Precision Air features an automatic air vent that exhausts hot air out the bottom of the unit after each inflation cycle. To prevent the inflater from over-heating, use only one operator and allow the unit to fully exhaust the hot air between cycles.

2. For best results, operate the Precision Air in a temperature controlled environment. When working outdoors, keep the unit out of direct sunlight. If possible, avoid operating unit outdoors in extremely hot weather. If the unit reaches temperatures that exceed normal working conditions, the thermal shut-off control will automatically shut the system down. When the unit cools down to normal working conditions the system will reset and be ready for use.

Service & Warranty

For assistance with service & repair issues, or for warranty information, please visit ConwinOnline.com

05092011



CONWIN INC.
4510 Sperry Street • Los Angeles, CA 90039
Phone (818) 246-9233 FAX (818) 246-6862



Online
Projects
Designs
Galleries
...and more!

ConwinOnline.com



Master Series DVD Set

Set Includes:

- 3 DVDs with 15 Step-by-Step Designs
- 24 New 8.5" X 11" Portfolio Builders (Series 6, 7 & 8) printed on 8.5 X 11" heavy weight glossy stock.
- Interactive DVD-Rom with Web Links

Learn More at ConwinOnline.com


Calibration Tool Instruction Sheet

The Calibration Tool enables you to adjust the outlets by increasing or decreasing the inflation size of the balloon. Use this tool only when you detect balloons are not being identically sized from both outlets.




Determine which outlet is not inflating to the correct size and remove the detachable friction fit outlet from the filling port by pulling upward and gently twisting as needed.

NOTE: It is best to use 11" balloons when comparing sizes. Once the desired size is reached, all balloon sizes should consistently inflate to the same size when the digital settings are changed. For time settings, refer to the Time Setting Chart (Fig 1.0) in the instruction sheet.

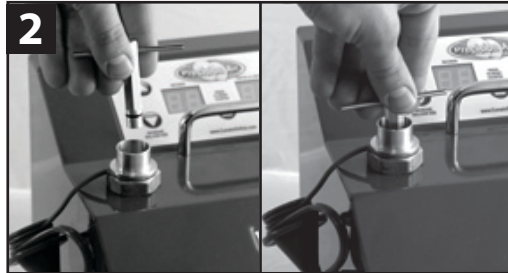

Insert the Calibration Tool into the filling outlet. Gently apply downward pressure and slowly rotate the tool until you hear a "click" sound and feel the tool become fully engaged in the outlet.

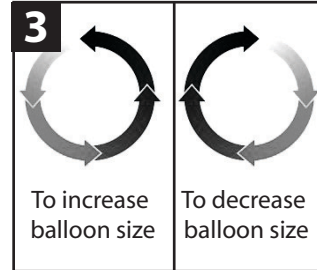

To **increase** the size of the balloon, turn the tool **counter clockwise** in quarter turn increments. To **decrease** the size of the balloon, turn the tool **clockwise** in quarter turn increments. **IMPORTANT:** Be careful not to over tighten the setting. **STOP** turning the tool clockwise if you feel resistance on the tool.



Remove the tool and press the detachable friction fit outlet back onto the filling port by pushing downward and gently twisting as needed. Inflate two balloons to compare sizes. Repeat steps 1 through 3 until both balloons are identically sized.

Service & Warranty

For assistance with service & repair issues, or for warranty information, please visit ConwinOnline.com or call **(818) 246-9233**